



Section #11

# Installation Procedure

## Phase II Coaxial EVR Balance Nozzle Repair Kit

<b>Part:</b>	VST-FEK-100
	VST-VCK-100
	VST-NSA-100
Front-End Kit (FEK) includes the Vapor Collection Kit (VCK) and the Nozzle Spout Assembly (NSA).	

***Vapor Systems Technologies, Inc.***

*650 Pleasant Valley Drive*

*Springboro, Ohio 45066*

*PH: 937-704-9333*

*FX: 937-704-9443*

*[www.vsthose.com](http://www.vsthose.com)*

# 1 Tools

---

- Adjustable Wrench
- Approved Fuel Container
- Wide Mouth Funnel
- Narrow End Nipper
- Torque Wrench
- Vaseline (or suitable for lubricate)

## 2 General Information

---

If hanging hardware components are involved in a drive-off or incur other customer abuse, each individual component must be functionally tested prior to customer dispensing activities.

## 3 Installation Preparation

---

This procedure must be followed to insure leak-proof installation and operation of these nozzles.

1. Turn off and tag the power to the dispenser. Dispenser must be de-energized prior to service to avoid personal injury.
2. Barricade work area to block vehicle access to the dispenser.
3. Close the dispenser shear valve prior to removing hanging hardware (hoses, safety breakaways, and nozzles).
4. Visually inspected and assess the extent of the damage to all hanging hardware components. If there are no imperfections/damages, proceed to FUNCTIONAL TEST.
5. Drain liquid product from the hanging hardware set into an approved container prior to replacing any hanging hardware components.
6. Remove hanging hardware from the dispenser prior to making replacement component assembly connections. (VST recommends connecting the whip hose to the dispenser as the last connection during hanging hardware re-assembly.)
7. To drain nozzle, engage nozzle interlock:
  - a. Push in face seal on nozzle boot assembly
  - b. Hold the backend of the nozzle over an approved container
  - c. Pull nozzle level to fully drain the nozzle

## 4 Vapor Collection Kit (VST-VCK-100) Removal

---

See figure 1

1. Remove large band clamp from the Vapor Collection assembly with end nippers.
2. Pull the Vapor Collection assembly (boot) off of the clamping groove of nozzle body.
3. Pull Vapor Collection assembly off of the spout by slightly twisting to go over the spout latch ring.
4. Properly discard the removed components.

## 5 Vapor Collection Kit (VCK) Replacement

---

1. Place the large band clamp on the collection sleeve. (See figure 1)
2. Check proper orientation of the interlock rod. (See figure 2)
3. Slide VCK over the spout.
4. Align and insert the interlock rod into the interlock port. (See figure 2)
5. Align and center all alignment marks on top of the vapor collection kit and nozzle scuff. (See figure 1)
6. Engage interlock a few times to check for correct alignment and functionality. (See function test 3)
7. Tighten collection band clamp until collection sleeve will not rotate. (See figure 1)

## 6 Nozzle Spout Assembly (VST-NSA-100) Removal

---

1. Remove Vapor Collection Assembly.
2. Loosen spout nut with smooth-jaw wrench. (See Figure 3)  
NOTE: Do not use pipe wrench or locking-type pliers.
3. Once threads are completely disengaged, pull the spout straight out.

## 7 Nozzle Spout Assembly Replacement

---

See figure 3.

1. Fuel chamber should remain in the nozzle casting with the vacuum sensing tube hole oriented at the top.
2. If the fuel chamber is pulled out of the nozzle casting:
  - a. Check O-ring for damage.
  - b. Replace O-ring if damaged (check for cuts, nicks, etc.).
  - c. Lubricate O-ring prior to re-assembly.
3. Insert fuel chamber into nozzle casting:
  - a. Poppet stem with spring goes through poppet hole in the fuel chamber (center hole).
  - b. Push fuel chamber until it is flush with casting.
  - c. Vacuum sensing tube in the fuel chamber should be oriented at the top.
4. Lightly lubricate **ALL** O-rings on the spout assembly.

**NOTE:** Do not block vacuum sensing-tube hole with lubricate.

5. Align vacuum sensing tube with mating hole in the fuel chamber.
6. Align the anti-rotation bump on the spout with the casting notch. Be careful not to damage the spout O-rings.
7. Firmly insert spout assembly into the nozzle casting.
8. Thread spout nut onto the nozzle casting and tighten firmly. Torque to 30 foot-pounds. Spout should be tight and not able to rotate. Do not over-tighten the spout nut.
9. Once the spout is replaced, re-install the vapor collection assembly per Vapor Collection Kit Replacement instructions.

## 8 Function Tests

---

1. Follow the VST Installation Procedure for each hanging hardware component. (Procedures: Sections 10, 12, and 13.)
2. Purge air from the system by pumping one-tenth (1/10) to two-tenths (2/10) of a gallon of fuel into an approved container. Inspect the nozzle connection for liquid leaks and make proper adjustments at the hose connection if necessary.
3. Check the nozzle shut-off action by dispensing fuel into an approved container at least three times to assure proper automatic operation of the interlock rod. According to U/L requirement 842, the fuel flow-rate must be greater than 3 gpm for the automatic shut-off mechanism to operate.

To test, operate the nozzle and submerge the spout tip in fuel until the fuel level covers the vent hole. The main valve of the nozzle automatically shuts off when liquid covers the vent hole at the end of the spout. The nozzle is not designed to operate on gravity flow. The hold-open latch will disengage automatically when liquid covers the vent hole in the spout.

Verify that the fuel flow stops when the nozzle collection sleeve is decompressed (e.g. interlock rod is disengaged). To test, dispense fuel into an approved container. Slowly remove the nozzle from the container while dispensing fuel. Fuel flow should stop when the nozzle collection sleeve is fully decompressed.

4. Measure the resistance between the dispenser outlet casting and the tip of the nozzle spout. Use an electronic multimeter set on the high range of the ohmmeter function. Resistance should not indicate more than 70,000 ohms per foot of the hose. Example: The measured resistance of a 12-foot hose must not exceed 840,000 ohms (840 kilohms).

## 9 Maintenance

---

Inspect nozzles daily for damaged components parts: vapor collection sleeve, face seal, interlock rod, spout, lever, lever lock, etc. Damaged components must be replaced. Vent hole at the end of the spout should be clear of debris. The nozzle will not operate properly if vent hole becomes clogged. The nozzle will not function properly without the interlock rod properly engaged. Keep the hose connections tight.

Subject to customer abuse, follow the initial inspection instructions found in Section 9. The nozzle should be replaced when damaged.

The nozzle is designed and constructed to give lasting service if properly handled and maintained. If for any reason it should need attention, contact your VST distributor for proper disposition.

**NOTE:**


Due to abuse, misuse, changing gasoline formulas, variation in maintenance practices, environmental conditions, and/or conditions beyond the manufacturer's control, dispensing equipment may need replacement before five (5) years. Inspections and proper maintenance procedures should be followed by the station manager to determine if replacement is required before five (5) years.

**WARNING:**


Unauthorized rebuilding or modifying of nozzles voids **ALL** approvals and warranties.

VST products must be used in compliance with applicable federal, state, and local laws and regulations.


If local regulatory codes prohibit use of the nozzle's hold-open clip, it must be removed prior to nozzle installation. Remove the nozzle to a safe work area. Place the nozzle on a flat surface. Locate the alloy rivet securing the hold-open clip and spring in the nozzle's handle. Use a drill with a 3/16" (5mm) drill bit, drill out the rivet securing the hold-open clip, and discard the clip and all other rivet debris.

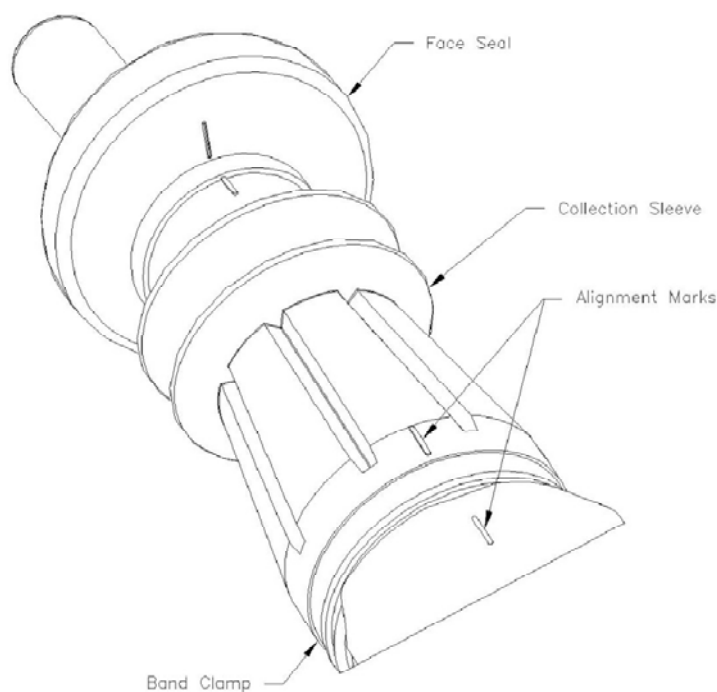

Vapor Collection Assembly  
(Figure 1)

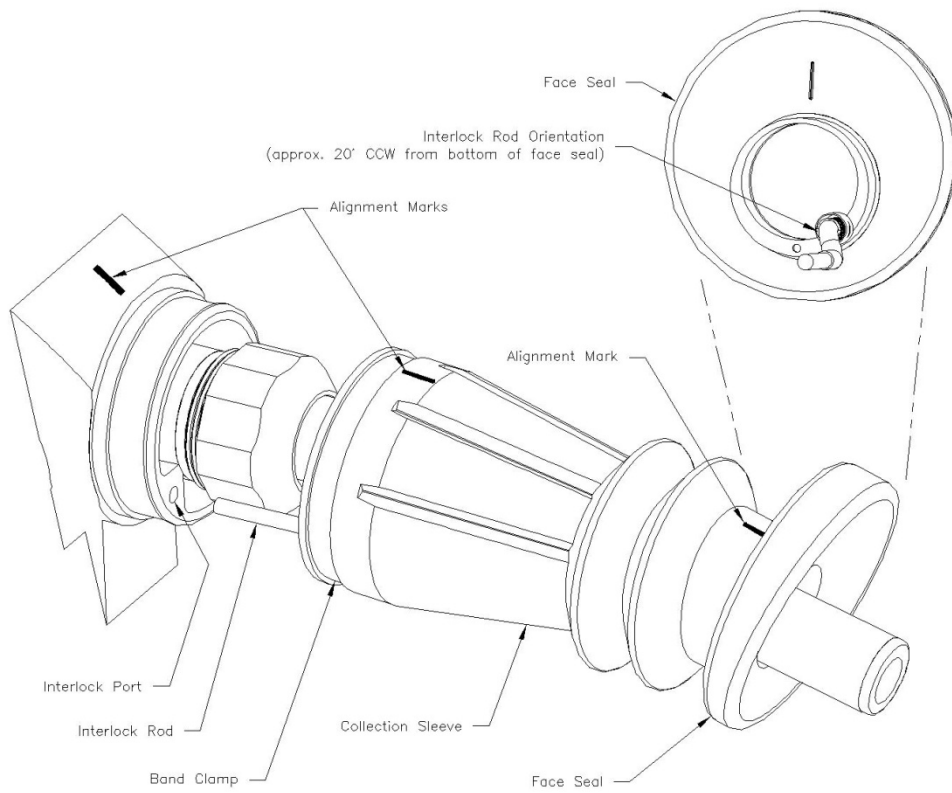

Interlock Assembly  
(Figure 2)

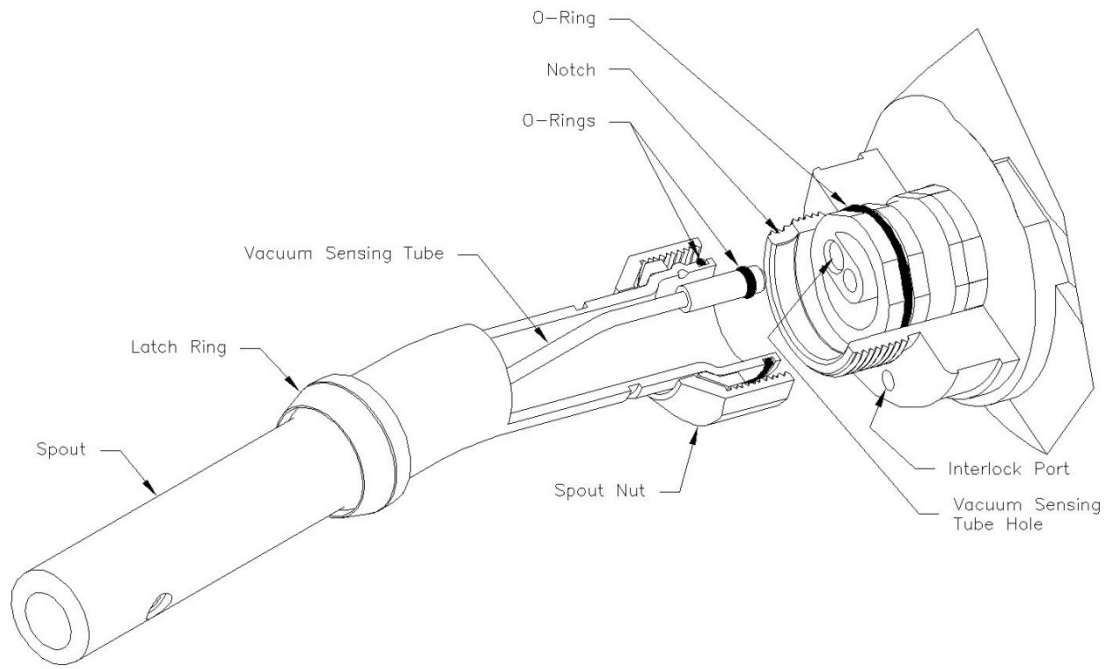

Spout Assembly  
(Figure 3)